



G-TUBE

RUGGED PORTABLE SPEAKER

 Bluetooth
Wireless




 Water
Resistant

 Rechargeable
6 Hr battery

©

G-40

LOCATION OF CONTROLS

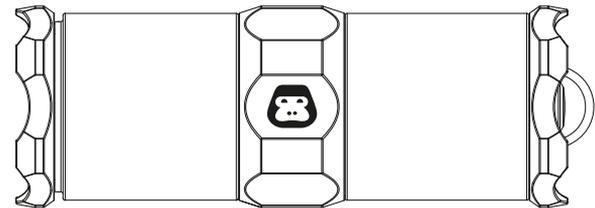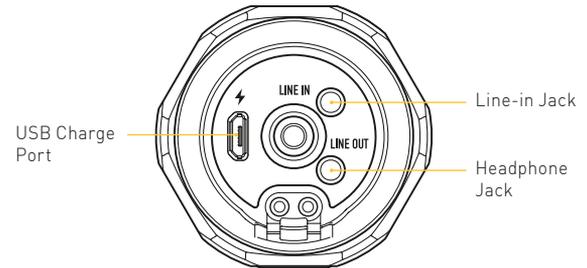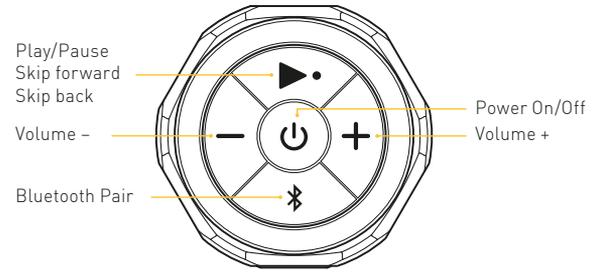

Hey there!

Thanks for purchasing G-TUBE and joining the G-Project family. As fans of the outdoors and the thrills it has to offer, our goal is to provide rugged speakers and accessories that fit with your adventurous lifestyle.

By combining performance, durability and style, we're able to offer products that don't flinch in the face of nature, so your music can handle anything the outdoors throws its way.

If you need a hand using your new G-TUBE, we're here to help. Email us at support@gprojectgear.com or give us a call Monday - Friday at 1-855-896-1795 between 8AM - 5PM CST.


PACKAGE CONTENTS:

- G-TUBE Wireless Travel Speaker
- USB Charging Cable
- User Guide

LED INDICATORS

Bluetooth LED: When G-TUBE is in pairing mode, the Bluetooth LED will flash blue. Once G-TUBE has paired successfully with a Bluetooth compatible device, the Bluetooth LED will turn solid blue.

Power / Charging LED: The white and red LEDs indicate the following statuses:

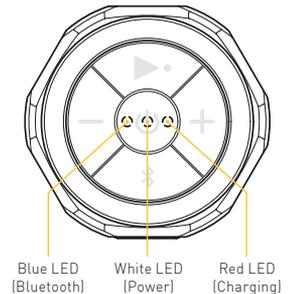

STOP BY AND SAY HELLO TO US:

 facebook.com/gprojectgear

 twitter.com/gprojectgear

 instagram.com/gprojectgear

Battery Status	Power Status	White LED	Red LED	Speaker Status
FULL	OFF	OFF	OFF	--
NOT FULL	OFF	OFF	ON	Battery Charging
FULL	ON	ON	OFF	--
NOT FULL	ON	ON	ON	Battery Charging
NOT FULL	ON	ON	OFF	Using Battery Power
LOW	ON	ON	Flash once every 3 secs	Battery Low
VERY LOW	ON	ON	Flash once every 2 secs	Battery VERY Low
NO POWER	OFF	OFF	OFF	Will Not Power On



Free Stickers!!

Head over to stickers.gprojectgear.com and we'll hook you up with some G-Project stickers.

MODE CHANGE INDICATORS

For modes change, 3 LEDs indicate the following status:

Mode	Power Status	Bluetooth LED	White LED	Red LED	Speaker Status
Default	ON	Normal	Normal	Normal	Headphone Out
Mode Change	ON	Flash 1st	Flash 2nd	Flash 3rd	Daisy Chain
Back to Default	ON	Flash 3rd	Flash 2nd	Flash 1st	Headphone Out

NOTE: While in modes change, LED flash only once in sequence.

GETTING CHARGED UP

G-TUBE includes a Micro USB power jack on the side (located under the External Jack Cover). Below are two ways you can charge G-TUBE.

- 1 Connect G-TUBE to a USB powered port on your computer or laptop (PC/MAC) using the supplied USB charging cable.
- 2 You can also charge G-TUBE by connecting G-TUBE to a USB power adaptor (not included) via the supplied USB charging cable.

NOTES: When fully charged, the G-TUBE battery will provide playback time of more than 6 hours, based on volume level and type of music. Approximate time to fully recharge the G-TUBE battery is 3.5 hours.

GET IN CONTROL

POWER ON / OFF

Press the POWER button to turn G-TUBE on and again to turn G-TUBE off.

VOLUME CONTROLS

Increase or decrease the volume by using the + or – buttons. G-TUBE will remember the volume setting when it is turned off.

CHANGING MODES

The default mode is "headphone out". To switch to "daisy chain" mode from the default setting, press and hold + and – buttons and the 3 LEDs will flash from the first one to the third one, to indicate "headphone out" mode has switched to "daisy chain" mode.

To return to the default "headphone out" mode, press and hold + and – buttons and the 3 LEDs will flash from the third one to the first one.

HEADPHONE MODE

Connect your earbuds or headphones to the Headphone jack on G-TUBE and initiate playback for private listening.

DAISY CHAIN MODE

Connect another G-TUBE or additional external speaker with a 3.5mm Line-in cable (sold separately) to the Headphone jack then change the input source to Daisy Chain mode and initiate playback.

BLUETOOTH WIRELESS

You can stream audio to G-TUBE from up to 33' away using your iPod, iPhone, iPad, Android, laptop, or other A2DP Bluetooth enabled device.

- 1 With G-TUBE powered on, press the PAIR button to enter Bluetooth mode, the Blue LED will begin to flash. If the last paired Bluetooth device is powered on and within range with Bluetooth turned on, the device will automatically reconnect with G-TUBE.

If you want to connect a different Bluetooth device, press and hold the PAIR button for about two seconds, the Blue LED will begin to flash indicating G-TUBE is in pairing mode and searching for Bluetooth compatible devices.

- 2 Power on your Bluetooth compatible device, enable Bluetooth, then search for Bluetooth devices. Select "G-TUBE" from the available list.
- 3 The Blue LED on G-TUBE will change from flashing to solid, indicating that your Bluetooth device is now connected to G-TUBE.
- 4 Press the PLAY/PAUSE button to begin streaming music. Press again to pause. Double tapping will skip to next track and triple tapping will skip back to the previous track.

MUSIC PLAYBACK

- Tap the PLAY button once while in Bluetooth mode to play or pause the audio playback on your Bluetooth device.
- Tapping the PLAY button 2x repeatedly while in Bluetooth mode will skip to the next track on your Bluetooth device.
- Tapping the PLAY button 3x repeatedly while in Bluetooth mode will skip to the previous track on your Bluetooth device.

NOTES: For the best audio performance, turn the volume on your Bluetooth device all the way up then adjust G-TUBE volume to a comfortable listen level.

BLUETOOTH WIRELESS NOTES (cont): Once your Bluetooth device has been paired with G-TUBE, it is simple to reconnect them. Make sure G-TUBE is powered on and within range then simply select "G-TUBE" from the list on your Bluetooth device.

G-TUBE can only play audio from one source at a time. If G-TUBE is connected to a Line-in source, Bluetooth will not function. Simply unplug the 3.5mm Line-in audio cable or press the PAIR button to switch to Bluetooth (if necessary, select "G-TUBE" on your Bluetooth device).

To reset the Bluetooth on G-TUBE, press and hold the PAIR button, this will disconnect the currently paired Bluetooth device and clear the memory list.

G-TUBE will automatically turn off if not paired with a device after 15 minutes.

LINE-IN

Connect a 3.5mm Line-in cable (sold separately) from the Line-in jack on G-TUBE to your audio device and initiate playback.

NOTES: For the best audio performance and minimal distortion, avoid turning the volume on your external audio source all the way up.

If a Line-In cable is connected, G-TUBE will default to Line-in mode.

If the PAIR button is pressed while the 3.5mm Line-in cable is connected to the Line-in jack, G-TUBE will switch to Bluetooth pairing mode.

To return to Line-in mode, simply reconnect a cable to the Line-in jack.

If no Line-in cable is connected to the Line-in jack, G-TUBE will default to Bluetooth mode and begin searching for a Bluetooth pairing device.

IMPORTANT SAFETY NOTIFICATIONS



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

NOTE: Any unapproved changes or modifications will void the warranty.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Compliance information: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

SAFETY PRECAUTIONS

- a. Only use attachments / accessories specified by the manufacturer.
- b. Please note the information printed underneath the unit.
- c. Keep open flames, such as lighted candles, away from this unit.
- d. Unplug this unit during lightning storms or when unused for long periods of time.
- e. Use only the same or equivalent type batteries as there is a danger of explosion if the incorrect batteries are used or they are installed incorrectly.
- f. Do not expose the battery to flames or dispose of it in a fire.
- g. Dispose of batteries properly according to environmental regulations.

G-Project is a registered trademark of Goodhatch, LLC
G-TUBE is distributed by Life Lab International LTD.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Life Lab International LTD. is under license.

Other trademarks and trade names are those of their respective owners.